


AV Equipment Set Kramer switcher to HDMI1

1. Powering Up the System

- Turn the projector on and off using the remote control.
- The projector input will be **HDMI 1** for wired connections at teacher station. Use the HDMI button on the remote control to set the projector to **HDMI 1**.
 - The selected projector input will be shown on the projection screen.
- Volume is adjusted using the projector remote control. The computer volume can also be used if projector volume is maxed out.
- Make sure the station power is turned on. When the station is turned on a red light will be visible on the power switch on the front of the teacher's station.

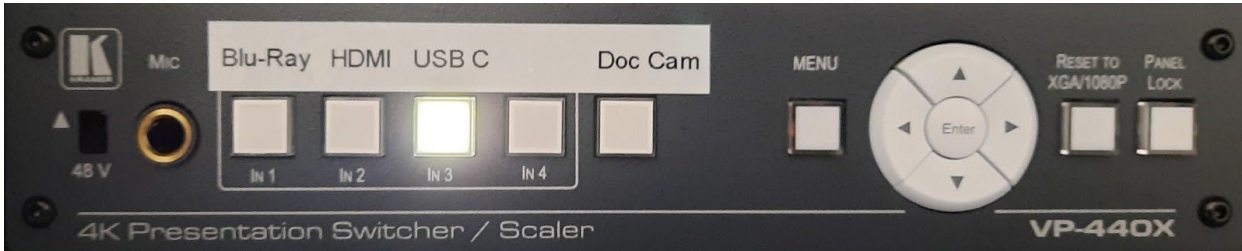

2. Using the Document Camera

- To turn on the Document Camera, locate the power button on the top or side of the device.
- Ensure that the large black cable is connected to **VGA OUT** on the back of the Document Camera. **DO NOT UNPLUG THE CABLE.**
- Locate the video switcher, shown above, on the front of the teacher station. Press the button below labeled **Doc Cam**. (See the photo above for reference.)

3. Using A Laptop Computer

- Turn on the computer.
- Laptops with **HDMI** connection:
 - Plug the cable into the computer.
 - Locate the Video switcher shown above on the front of the teacher station. Press the button below labeled **HDMI**. The button should be illuminated.
 - It will take a few seconds to sync up before the projector displays and image.
 - Audio will play over the HDMI cable.
- Laptop with **USB C** connection:
 - Plug the USB C cable into the computer.
 - Locate the Video switcher shown above on the front of the teacher station. Press the button below labeled **USB C**. The button should be illuminated.
 - It will take a few seconds to sync up before the projector displays an image.
 - Audio will play over the USB cable.
- **Troubleshooting no audio playing from computer:**
 - Check the projector and computer volume.
 - Make sure computer speaker is not muted
 - Click on the speaker icon in the lower right of the laptop screen and make sure the audio device **VP-440X** is selected, click the up arrow and select **VP-440X (Intel display audio)**
- You **MAY** need to press and hold the **windows key** and the **'P'** key and click on **duplicate to display on the projector** selection window. When you exit power point slides it may leave the display mode in **extended desktop**, use the **windows key** and the **'P'** key to change the display mode.

4. To use the Blu-Ray player

- Turn on Blu-ray player.
- Locate the Video switcher shown above on the front of the teacher station. Press the button below labeled **Blu-Ray**, the button will then become illuminated.
- It will take a few seconds to sync up before the projector displays and image.

5. Equipment Shut-Down

- SHUT OFF LCD PROJECTOR(s) using the projector remote control.

To report a problem, call the Northwest Technology Service Center at 660-562-1634.